

VEHICLE WIRING DIAGRAM

Thank you for purchasing our Scamp Travel Trailer! Before you pick up your trailer you will need to have your vehicle wired with the proper vehicle plug and wiring.


PLEASE NOTE: IF YOUR TRAILER HAS ELECTRIC BRAKES YOU WILL NEED A BRAKE CONTROLLER INSTALLED BEFORE YOU WILL BE ABLE TO CORRECTLY TOW YOUR TRAILER. YOUR LOCAL VEHICLE DEALERSHIP WILL BE ABLE TO HELP YOU GET THE PROPER HITCH, WIRING, AND PLUG CONNECTIONS.



The recommended brake controller would be the Tekonsha Primus IQ which features a digital LED readout, boost feature when extra braking power is needed, and smooth proportional braking.

What type of plug connection do I need to be able to connect to my trailer?

We at Eveland's Inc./Scamp Trailers use a bladed, round, 7-way shown in the diagram below. There are many different brands available that will work with the Scamp Trailer such as Hopkins, Bargman, Camco, etc... As long as they are the bladed, round, 7-way.

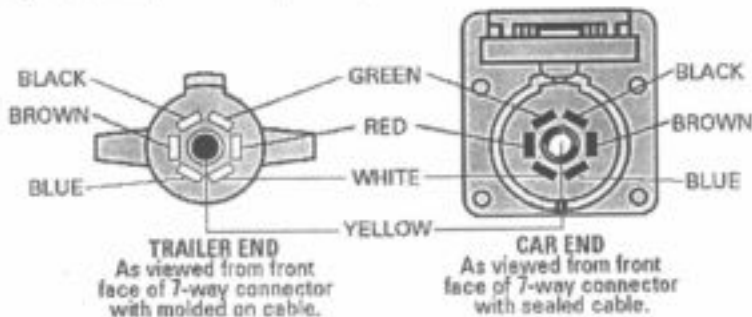

- Green Wire – Tail Lights/Marker Lights
- Brown Wire – Right Turn/Brake Light
- White Wire – Ground
- Blue Wire – Electric Brakes
- Red Wire – Left Turn and Brake Light
- Black Wire – Positive (Charge/Hot Line)
- Yellow Wire – Auxiliary (Back Up Lights)